

## Fairy Floss / Cotton candy Instructions

**DO NOT** run machine too hot

**DO NOT** use on unstable ground

**DO NOT** when wearing necklaces, rings, or untied long hair (as it may get caught in motor)

1. Place machine on level surface, fit bowl around collar
2. Turn machine on and allow to heat. Do not turn temperature up as sugar will burn and clog the machine
3. Fill head with sugar. In a few minutes floss will appear
4. Place stick inside ring of floss formed, twist stick in fingers at the same time going in an anti clockwise direction
5. Keep bowl clear of thrown floss. Avoid buildup in bowl and around head collar
6. When not making floss please turn machine off via buttons so sugar will not burn and clog the head.

**IMPORTANT: The hirer is responsible for broken bubbles, burnt - out motors and any damage or loss of the machine**

---

If having difficulty or machine fails to operate, please contact 0415 308 134. Do not attempt any repairs

---

Machine Cleaning:

1. Unplug machine
2. Lift off bowl and bubble - Wash with warm water
3. DO NOT WASH HEAD UNIT!!
4. Wipe over cabinet with damp cloth only